



General Care + Maintenance Guide

Plywood (finished)

Use a furniture cleaner, such as Endust®, and wipe with a soft, clean cloth.

Maple (finished)

Use a furniture cleaner, such as Endust®, and wipe with a soft, clean cloth.

Write-n-Wipe

Use glass cleaner and a soft, clean cloth. For unintentional permanent marks, use a soft cloth dampened with isopropyl alcohol.

Mirror

Use a mild dish washing detergent and water on a soft, clean cloth. Do not use glass cleaner.

Laminate

Use a mild detergent on a damp cloth—avoid the use of abrasive cleaners that contain acids or alkalis, scouring pads, and excessive water. After cleaning, the products should be dried off using a soft towel to prevent damage to the product. Excess TRUEdge adhesive may be cleaned off using 3M citrus-based adhesive spray cleaner.

Flannel

Wipe with a damp, soft, clean cloth. Use a lint brush to help remove fibers.

Chalkboard

Wipe with a damp, soft, clean cloth.

Hardboard (finished)

Wipe with a damp, soft, clean cloth or a furniture cleaning product such as Endust®.

Magnetic Write-n-Wipe

Wipe with a light, damp, clean cloth.

See-Thru + Clear Acrylic

Wipe with a mild soap detergent and a lukewarm water solution. Use a clean soft cloth or sponge with as much solution as possible. Rinse well. Dry by blotting with a damp cloth. *Do not use window cleaning fluids, scouring compounds, gritty cloths, leaded or ethyl gasoline or solvents such as alcohol, acetone, and carbon tetrachloride.

Metal + Plastic

Use a mild detergent on a damp cloth, avoiding the use of abrasive cleaners, scouring pad, and excessive water. After cleaning, the products should be dried off using a soft towel to prevent damage to the product. Move furniture during floor mopping to prevent frequent contact with floor cleaning chemicals.

EverPlay™ Outdoor Furniture

EverPlay™ outdoor furniture is built for life in nature, so there is no need to cover up when the rain comes. In fact, rain showers help your furniture stay clean. Dirt, spills, and other messes can be washed away with a non-abrasive cleaner, such as mild dish soap diluted with warm water. Always use a soft cloth to wash and rinse well. If sanitizing or disinfecting is needed, use eco-friendly and bleach-free sanitizing sprays. Do not use any scrubbers – including Magic Erasers – on EverPlay™ products.

Using Disinfectant:

Diluted bleach may be used as a disinfectant but do not over-saturate and the surfaces must be promptly wiped dry to avoid water damage. The CDC recommends 5 tablespoons (1/3rd cup) of 5.25–8.25% bleach per gallon of room temperature water for disinfecting surfaces.